

USER MANUAL

Svenska, English

HAVSÖ



Jacob 3.5

WATER KETTLE

Svenska

Säkerhetsföreskrifter	4-5
Produktöversikt	6
Användning	7
Underhåll	8
Specifikationer	8
Övrig information	9

English

Safety precautions	10-11
Product overview	12
Operation	13
Maintenance	14
Specifications	14
Other information	15

SÄKERHETSFÖRESKRIFTER

Läs noggrant igenom bruksanvisningen innan du använder produkten och spara den för framtida bruk. Om du följer dessa instruktioner kommer du ha glädje av produkten länge.

- Innan du ansluter enheten: Säkerställ att ditt vägguttags spänning motsvarar den spänning som anges på produktens typskylt (typskylten är placerad på undersidan av enheten).
- För att förhindra risk för elchock: Öppna aldrig höljet. Det finns inga delar som du som användare själv kan laga. Överlåt all service till kvalificerad servicepersonal.
- Reparationer av elektriska enheter får endast utföras av behörig servicepersonal. Felaktig reparation kan utsätta användaren och enheten för allvarig fara.
- Använd inte produkten om den har en skadad kontakt eller sladd, eller efter att den tappats och skadats på något sätt. Gör du det kan det leda till elchock/personskador eller skador på egendom.
- Om strömsladden är skadad måste den ersättas av tillverkaren, dess serviceagent eller liknande kvalificerad servicepersonal för att undvika fara.
- Koppla inte från enheten genom att dra i sladden, dra i kontakten. Annars kan sladden eller enheten skadas.
- Låt inte strömkabeln hänga ner över bords- eller bänkanter eller komma i kontakt med heta ytor.
- Den här apparaten är försedd med en jordad stickpropp. Kontrollera att eluttaget i ditt hem är ordentligt jordat.
- Tryck inte in föremål i några öppningar på enheten då skada på enheten och/eller elchock kan uppstå.
- Använd inte enheten till annat än det den är avsedd för.
- Sänk inte ned enheten i vatten eller annan vätska.
- Koppla alltid från enheten innan du utför rengöring och underhåll.
- Placera inte enheten nära värmeavgivande produkter, eller i direkt solljus.
- Använd inte enheten utomhus.
- Denna utrustning får inte användas av personer (inklusive barn) med nedsatt känsel, fysisk eller mental förmåga eller har bristfällig erfarenhet eller kunskap.


SÄKERHETSFÖRESKRIFTER

De ska ha lämplig tillsyn och ges tillräckliga instruktioner från en person som ansvarar för deras säkerhet, för att få använda utrustningen.

- Lämna aldrig enheten i närheten av barn. Produkten är ingen leksak! Noggrann tillsyn krävs när produkten används i närheten av barn.
- För att undvika skador på värmeelementen, kör inte vattenkokaren tom.
- Undvik kontakt med ånga som pyser ut från pipen när vattnet kokar eller direkt efter att vattnet kokats upp.
- Om vattenkokaren skulle slås på utan att ha vatten i sig så kommer vattenkokaren stängas av automatiskt. Se sedan till att vattenkokaren nedkyld innan du använder den igen.
- Se till att vattenkokaren används på en plan yta där barn inte kan komma åt. Detta för att förhindra skador på vattenkokaren och personsador.
- Flytta inte enheten när vattenkokaren är påslagen.
- Vattenkokaren kan endast användas med medföljande stativ.
- Kokande vatten ska hållas ut långsamt och försiktigt och vattenkokaren får inte tippas för snabbt.
- Vidrör inga heta ytor. Ta endast i handtaget och strömknappen.
- Strömplattan kan inte och får inte användas till något annat än vattenkokaren.
- Var mycket försiktig när du flyttar vattenkokaren medan den innehåller hett vatten.
- Om för mycket vatten har fyllts på kan vatten spruta ut.
- Se alltid till att locket är ordentligt stängt och inte öppnas medan vattnet kokar. Brännskador kan uppstå om locket öppnas under kokning.
- Apparaten är endast avsedd för användning i hemmet eller liknande miljöer såsom:
 - personalmatsalar
 - lantgårdar
 - hotellrum och liknande
 - vårdshus och liknande
- Se till att vattenkokaren är avstängd innan du lyfter av den från strömplattan.

PRODUKTÖVERSIKT

1. Lock
2. Lockknapp
3. Pip
4. Kanna
5. Bas
6. Handtag
7. Vattennivå
8. Strömknapp

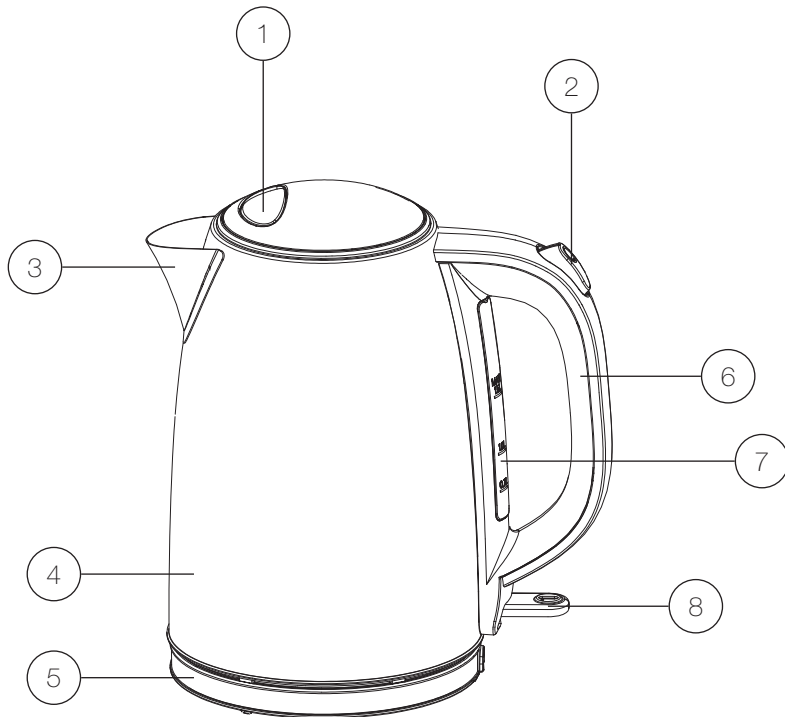

ANVÄNDNING

Innan du använder vattenkokaren

Innan du använder vattenkokaren för första gången rekommenderas att du rengör den genom att fylla den med vatten, koka upp och hålla ut vattnet, två gånger i följd. Torka av den utvändigt med en fuktig trasa.

Obs! Vattenkokarens maxkapacitet är 1.5 liter.

Torrkokningsskydd

Om du skulle råka köra vattenkokaren tom kommer torrkokningsskyddet automatiskt att stänga av apparaten. Om detta inträffar, låt vattenkokaren svalna innan du fyller på med kallt vatten och startar kokningen.

Så använder du din vattenkokare

1. För att fylla på vatten i vattenkokaren, lyft av den från strömplattan. Öppna locket genom att trycka på öppningsknappen för locket. Fyll på med önskad mängd vatten och sätt tillbaka locket. Du kan även fylla på vatten genom pipen. Vattennivån får inte överstiga MAX-angivelsen eller understiga MIN-angivelsen. Fyller du på för lite vatten kommer vattenkokaren att stänga av utan att koka upp vattnet.
Obs! Fyll inte på vatten över max-nivån då det kan leda till att vatten sprutar ut ur pipen vid kokning. Se till att locket är stängt ordentligt innan du sätter i kontakten i eluttaget.
2. Stäng locket. Placera vattenkokaren på strömplattan. Sätt i kontakten i ett eluttag. Tryck på strömknappen så att lampan tänds. Vattnet börjar värmas upp. Vattenkokaren stängs av automatiskt när vattnet har kokat upp. Du kan trycka på strömknappen för att stänga av vattenkokaren när som helst under kokning. Om du vill fortsätta kokningen är det bara att trycka på strömknappen igen för att starta den på nytt.
Obs! Se till att strömknappen inte är blockerad och att locket är stängt ordentligt. Vattenkokarens automatiska avstängning fungerar inte om strömknappen är blockerad eller om locket är av.
3. Lyft av vattenkokaren från strömplattan och håll ut vattnet.
Obs! Var försiktig när du håller ut vatten från vattenkokaren då kokande vatten kan leda till brännskador. Öppna inte locket så länge vattnet är hett.
4. Vattenkokaren kommer inte att starta igen förrän strömknappen slagits på. Vattenkokaren kan förvaras på strömplattan när den inte används.
Obs! Dra alltid ur sladden när vattenkokaren inte används.

UNDERHÅLL

Rengöring och underhåll

- Dra alltid ur kontakten ur eluttaget innan rengöring.
- Sänk aldrig ner vattenkokaren, sladden eller strömplattan i vatten eller låt fukt sippra in i apparatens elektriska delar.
- Torka av vattenkokaren utvändigt med en fuktig trasa eller rengöringsduk. Använd giftfria rengöringsmedel.
- Kom ihåg att rengöra filtret med jämna mellanrum. Dra ut filtret för att lättare göra rent det, och sätt tillbaka det efter rengöring.
Obs! Använd inga kemiska eller frätande rengöringsmedel för rengöring av vattenkokarens utsida och inga redskap av metall eller trä.
- När vattenkokaren inte används eller ska förvaras kan strömkabeln viras ihop under strömplattan.

Avlägsna kalkavlagringar

Vattenkokaren bör avkalkas regelbundet då kalken i kranvattnet kan bilda avlagringar på botten av vattenkokaren och försämra dess effektivitet. Använd ett vanligt avkalkningsmedel som finns att köpa i affären och följ instruktionerna på förpackningen. Du kan även använda vitvinsvinäger genom att följa dessa instruktioner:

- Häll i 3 dl vitvinsvinäger i vattenkokaren och fyll upp med vatten.
- Låt stå över natten.
- Häll ut blandningen, fyll på med rent vatten, koka upp och häll ut vattnet. Upprepa flera gånger tills lukten av vinäger har sköljts bort. Eventuella fläckar som finns kvar i pipen kan avlägsnas genom att gnida med en fuktig trasa.

SPECIFIKATIONER

Modellnummer	530061
Strömförsörjning	AC 220-240V, 50/60Hz
Effekt	1850 - 2200 W

ÖVRIG INFORMATION

Miljö

Den här symbolen på produkten eller i instruktionerna betyder att den elektriska och elektroniska utrustningen ska slängas separat från annat hushållsavfall när den inte fungerar längre. Inom EU finns separata återvinningssystem för avfall. Kontakta lokala myndigheter eller din återförsäljare för mer information.



Den här symbolen på produktens förpackning innebär att materialet är återvinningsbart.



Lag och säkerhet

Detta märke finns på produkten och i manualen för att visa att den uppfyller de europeiska säkerhets- och elektromagnetiska kraven. Denna produkt är tillverkad enligt gällande regler för elektromagnetiska fält (EMF), vilket innebär att den är säker att använda så länge säkerhetsanvisningarna följs. Produkten är tillverkad enligt gällande EU-lagstiftning, som begränsar användning av skadliga ämnen i elektriska och elektroniska produkter.



Förbehåll

Vi förbehåller oss rätten att justera eventuella tryckfel samt fortlöpande ändra och förbättra produkten och medföljande material.

SAFETY PRECAUTIONS

Read this instruction manual carefully before use and save it for future reference. If you follow these instructions, your appliance will provide you with years of good service.

- Before you connect the appliance: Ensure that the voltage rating on the type plate corresponds to your mains voltage (type plate is located on the bottom of the product).
- To reduce the risk of electric shock: Do not remove the cover. There are no user serviceable parts inside. Refer servicing to qualified service personnel.
- Repairs to electrical appliances shall always be performed by qualified personnel. Improper repairs may place the user and the equipment at serious risk.
- Do not operate the appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way. Doing so may cause electric shock/personal injuries and property damage may occur.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified people to avoid a hazard.
- Do not remove the appliance from the mains power supply by pulling the cord, pull the plug. Otherwise damage to the cord and appliance may occur.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- This appliance has been equipped with a grounded plug. Ensure the wall outlet in your house is well earthed.
- Do not push objects into any openings as damage to the equipment and/or electric shock may occur.
- Do not use the appliance for anything other than its intended use.
- Do not immerse the product in water or any other liquid.
- Always unplug the appliance after use and before any cleaning or maintenance.
- Do not place the appliance near heat emitting appliances or in direct sunlight.
- Do not use the appliance outdoors.
- The equipment is not intended for use by people (including children) with reduced physical, sensory or mental capabilities,


SAFETY PRECAUTIONS

or lack of experience or knowledge. They should be given appropriate supervision and instructions to use the equipment by a person responsible for their safety.

- Never leave the appliance within reach of children. The product is not a toy! Close supervision is required when using the appliance near children.
- Do not operate the appliance without anything in it, to avoid damaging the heat elements.
- While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout.
- Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
- Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
- Do not move the unit while the kettle is switched on.
- The kettle can only use with the stand provided.
- Always be careful when pouring boiling water. Tip the kettle carefully and slowly.
- Do not touch the hot surface. Use the handle or the button.
- The power base cannot be used for other purposes or products than this water kettle.
- Extreme caution must be taken when moving an appliance containing hot water.
- If the kettle is overfilled, boiling water may spill out.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- Ensure that the kettle is switched off before removing it from its stand.

PRODUCT OVERVIEW

1. Lid
2. Lid button
3. Spout
4. Body
5. Base
6. Handle
7. Water gauge
8. Switch

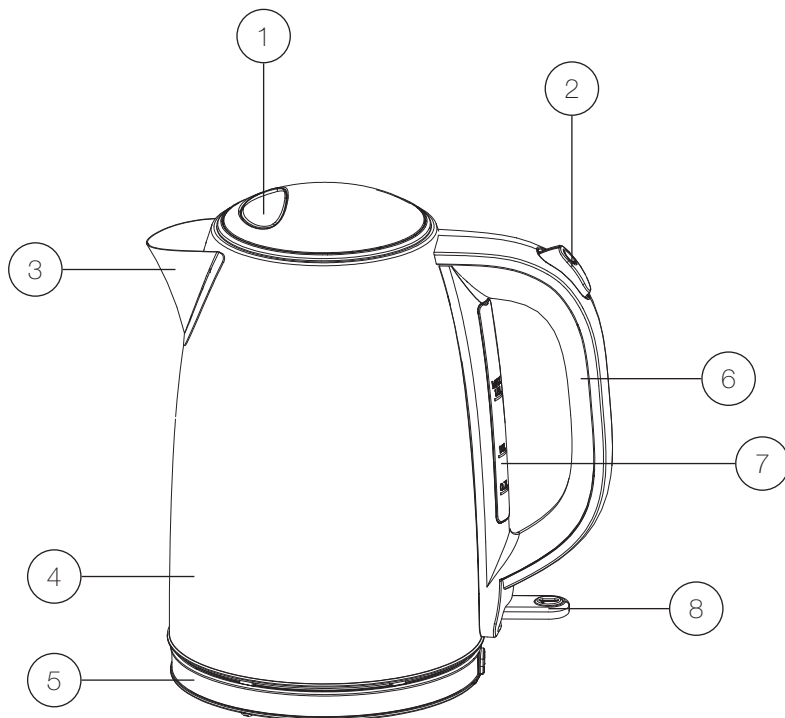

OPERATION

Before using your kettle

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling a full kettle of water twice and then discard the water. Wipe the surface with a damp cloth.

Note: The max capacity of the kettle is 1.5 liter.

Dry-boil protection

If you accidentally let the kettle operate without water, the dry-boil protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

Use your kettle

1. To fill the kettle, remove it from the power base and open the lid by pressing down lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle switching off before the water has boiled.

Note: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

2. Close the lid. Place the kettle on the power base. Connect the plug into a power outlet. Turn on the switch, the indicator will light up. Then the kettle will start to boil the water. It will switch off automatically once the water has boiled. You can shut off the power by turning off the switch at any moment during boiling. If you want to boil water again, only turn on the switch directly to restart the kettle.

Note: Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is open.

3. Lift the kettle from the power base and then pour the water.

Note: Operate carefully when pouring the water from your kettle as boiling water may result in scalding, besides, don't open the lid while the water in the kettle is hot.

4. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

Note: Always disconnect the power supply when not use.

MAINTENANCE

Cleaning and maintenance

- Always disconnect the appliance from the power outlet before cleaning.
- Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
- Wipe the outside of body with a damp cloth or cleaner, never use a poisonous cleaner.
- Remember to clean the filter at intervals. For easier cleaning, detach the filter and then replace it after cleaning.

Note: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

- When not use or storage, the power cord may be wound under the bottom of kettle.

Removal of mineral deposits

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle - which may affect the performance of the product. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow below instructions and use white vinegar:

- Fill the kettle with 3 cups of white vinegar, then add water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
- Then discard the mixture in the kettle, fill the kettle with clean water, boil and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

SPECIFICATIONS

Model number	530061
Power supply	AC 220-240V, 50/60Hz
Effect	1850 - 2200 W

OTHER INFORMATION

Environment

This symbol on the product or in the instructions means that the electrical and electronic equipment must be disposed of separately from other household waste when it does not work anymore.

The EU has separate waste collection systems, contact your local dealer or authority for more information.



This symbol on the products packaging means that the material is recyclable.



Law and safety

This product has been manufactured according to current regulations for electromagnetic fields (EMF), which means that it is safe to use if used according to safety instructions. The product is manufactured according to current regulations within the EU legislation, limiting the use of hazardous substances in electrical and electronic equipment.



Reservations

We reserve the right to correct any typographical errors, and reserve the right to make ongoing changes and improvements to the product and related materials.



Made in P.R.C
Imported by Bergsala SDA AB
P.O. Box 10204
434 23 Kungsbacka, Sweden